





Here it is.

<u>MCE Mode:</u> When the remote control is under MCE mode, pressing on the POWER key will open MCE – of course, you must have MCE in your system – and every key on the remote controls almost each function of MCE.

The picture below illustrates MCE under MUSIC function.



**Standard Mode:** When POWER key is pressed, a menu will shows up for you to choose which function you want to use. Please see the picture below, from left to right: execute WinFast PVR2, WinFast FM, hibernate, power off, reboot system, and log off.













Please see the picture below, POWER key is the white button with red mark on it and circled by green MCE circle.



In other words, it can control different target when under different mode. (MCE or Standard Mode) The picture below shows the rear view of the remote control. (It is the battery chamber in the center.)



But how to switch between MCE and Standard Mode? Of course you don't have to click on the mouse to choose the software. You can do the operation right on the remote control! First, let's take a look on the picture below, an indication on the bottom right corner on the remote control.



There is a "STD←→MCE" mark on the right side of the mark "LEADTEK", and below are right and left arrows and "3sec".

The indication means pressing on the left and right arrows simultaneously for 3 seconds, you can switch the remote control between the two modes.





The two buttons are the located at the two sides of "OK" and bracketed by green brackets.

Illustrated below, press the two button simultaneously for 3 three seconds and the POWER key will blink. Then the remote control finishes mode change. Please notice the POWER key blinks or not when switching between modes.



When under MCE mode, you can find the POWER key blinks every time you press on the remote control. However, in Standard mode, POWER key does not blink. You can also tell which mode the remote control is in by this way. The picture below illustrates the POWER key lights up when key on the remote control is pressed. (Please notice the lighted POWER key circled by the green MCE mark.



If there isn't any pressed, the POWER does not blink. Please see the picture below.



When under Standard mode, POWER keys does not blink no matter what. You can use this feature to tell which mode the remote control is in, and to make sure if the switch success or not.